

Audi A8

Current Flow Diagram


No. 52 / 1

Edition 05.1998

Radio Bose system Concert with and without CD changer

Model year 1998

Fuse box

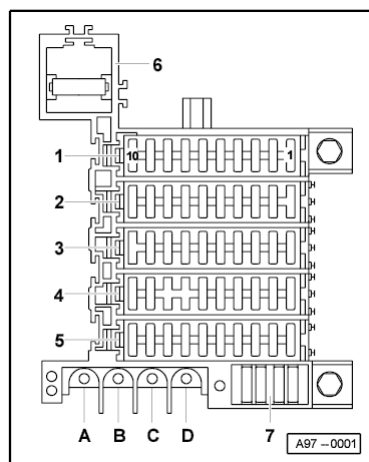


- 1 - Fuse carrier 1 (ST1), black
- 2 - Fuse carrier 1 (ST2), red
- 3 - Fuse carrier 1 (ST3), yellow
- 4 - Fuse carrier 1 (ST4), blue
- 5 - Fuse carrier 1 (ST5), brown
- 6 - Radiator fan fuse (S42)

7 - Spare fuses

A, B, C, Screwed junctions

D -

Relay and fuse carrier, luggage compartment, right

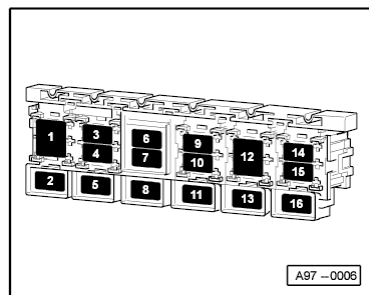

Position of relays:

1 - Terminal 30 junction box

6 - Radio fuse (S92)

Fuse colours:

30 A - green

25 A - white

20 A - yellow

15 A - blue



10 A - red

5 A - beige

Audi A8

Current Flow Diagram

No. 52 / 2

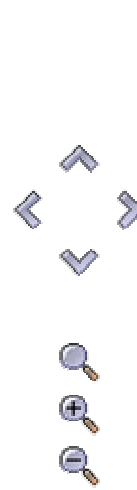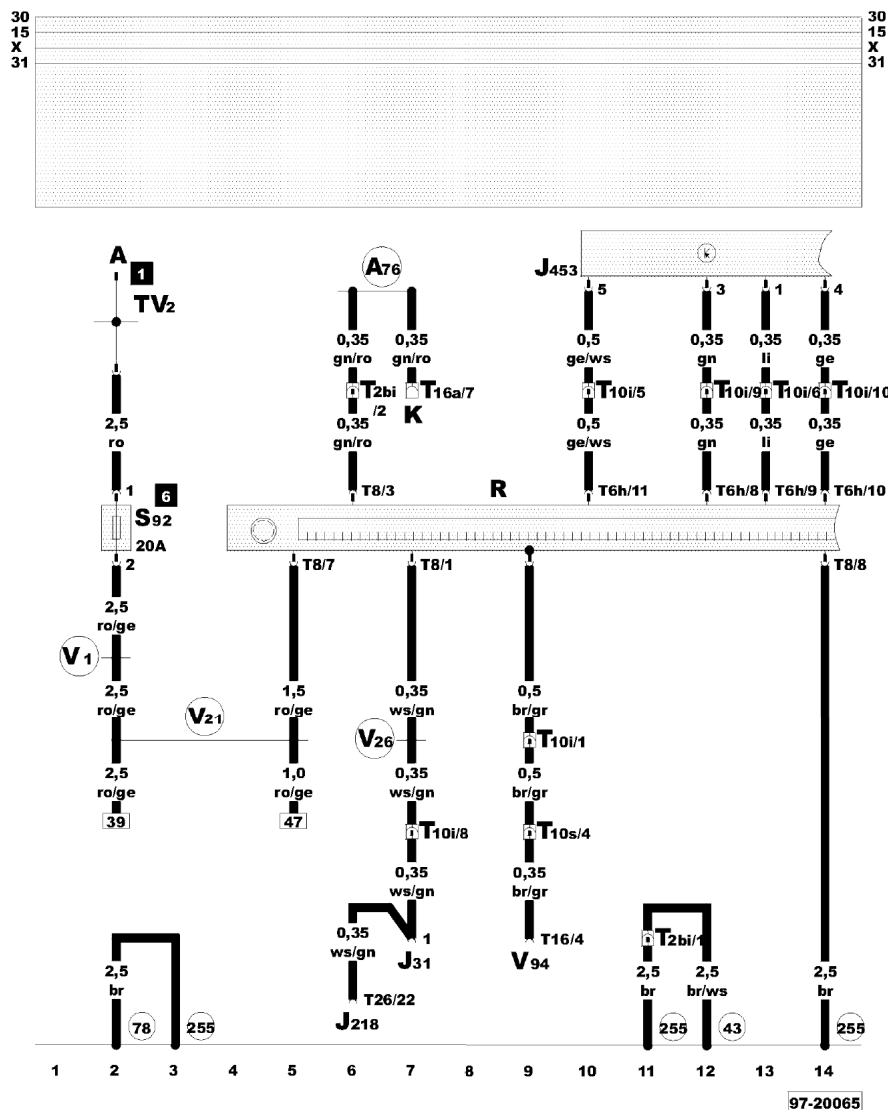


- Radio Bose system Concert with and without CD changer**
- A - Battery
 - J31 - Automatic intermittent wash/wipe relay
 - J218 - Combi-processor in dash panel insert
 - J453 - Multi-function steering wheel control unit
 - K - Diagnosis connection
 - R - Radio
 - S92 - Radio fuse
 - T2bi - 2-pin connector, brown, in centre console
 - T6h - 6-pin connector, green, radio connector I-2
 - T8 - 8-pin connector, black, radio connector III
 - T10i - 10-pin connector, yellow, in centre console
 - T10s - 10-pin connector, black, footwell, right, at wheelhouse, behind carpet
 - T16 - 16-pin connector, connector plug C at V94
 - T16a - 16-pin connector, diagnosis connection
 - T26 - 26-pin connector, red, on dash panel insert
 - TV2 - Terminal 30 junction box
 - V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
 - 43 - Earth point, lower part of right A-pillar
 - 78 - Earth point, lower part of right B-pillar
 - 255 - Earth connection -1-, in radio wiring harness
 - A76 - Connection (diagnosis wire K), in dash panel wiring harness
 - V1 - Positive (+) connection (30), in rear loudspeaker wiring harness
 - V21 - Positive (+) connection (30), in radio - amplifier wiring harness
 - V26 - Connection (speed signal), in navigation wiring harness

Audi A8

Current Flow Diagram

No. 52 / 3

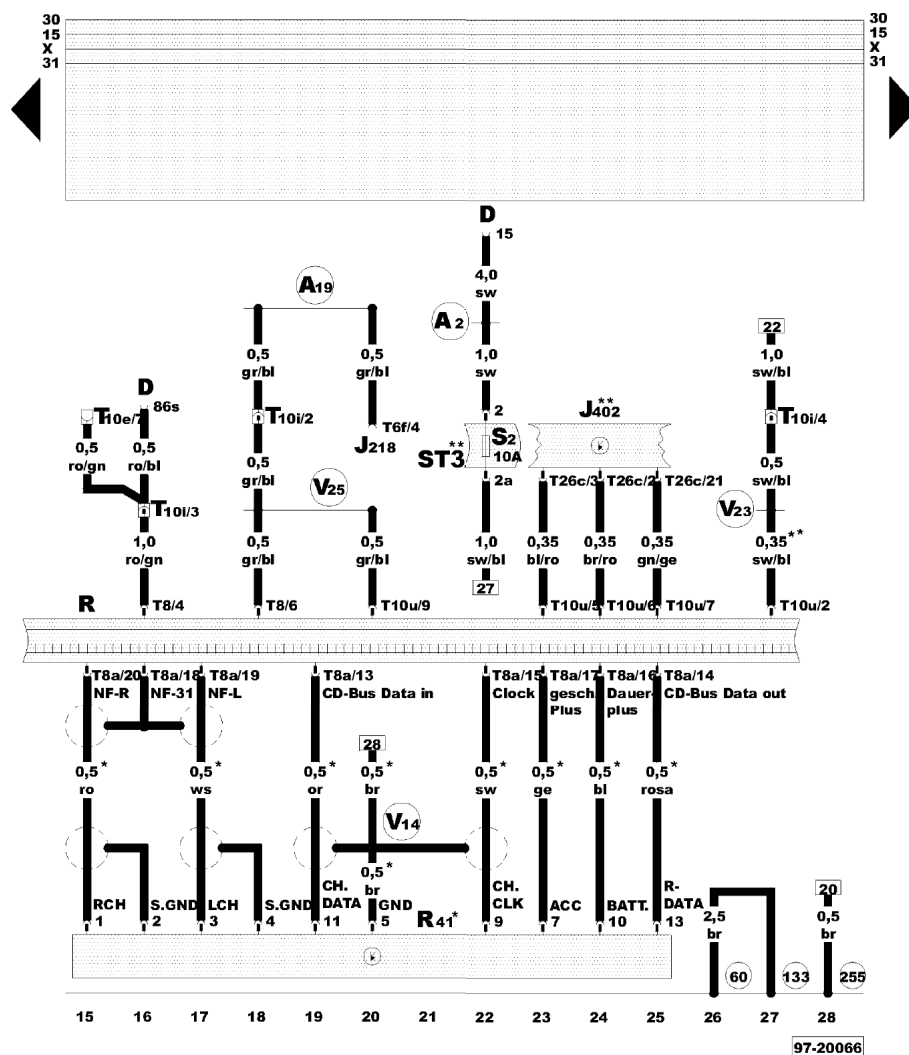

Radio Bose system Concert with and without CD changer


- D - Ignition/starter switch
- J218 - Combi-processor in dash panel insert
- J402 - Operating electronics control unit, navigation
- R - Radio
- R41 - CD changer
- S2 - Fuse in fuse carrier
- T6f - 6-pin connector, black, on dash panel insert
- T8 - 8-pin connector, black, radio connector III
- T8a - 8-pin connector, blue, radio connector I-3
- T10e - 10-pin connector, green, footwell, right, at wheelhouse, behind carpet
- T10i - 10-pin connector, yellow, in centre console
- T10u - 10-pin connector, red, radio connector IV
- T26c - 26-pin connector, on operating electronics control unit, navigation
- 60 - Earth point, near right tail light
- 133 - Earth connection, in loudspeaker wiring harness
- 255 - Earth connection -1-, in radio wiring harness
- A2 - Positive (+) connection (15), in dash panel wiring harness
- V14 - Connection (screening), in CD changer wiring harness
- V23 - Positive (+) connection (15a), in navigation wiring harness
- V25 - Connection (58), in navigation wiring harness
- * - Only models with CD changer
- ** - Models with navigation system

97-20066

Audi A8


Current Flow Diagram

No. 52 / 4

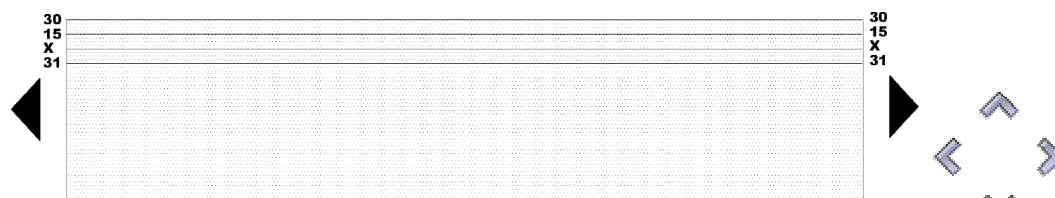

Radio Bose system Concert with and without CD changer

- R - Radio
- R15 - Bass loudspeaker, rear left
- R17 - Bass loudspeaker, rear right
- R21 - Bass loudspeaker, front left
- R23 - Bass loudspeaker, front right
- R26 - Middle-high tone loudspeaker, front left
- R27 - Middle-high tone loudspeaker, front right
- R34 - Middle-treble tone loudspeaker, rear left
- R35 - Middle-treble tone loudspeaker, rear right
- R43 - Amplifier with bass loudspeaker (luggage compartment, right)
- T6g - 6-pin connector, yellow, radio connector I-1
- 133 - Earth connection, in loudspeaker wiring harness

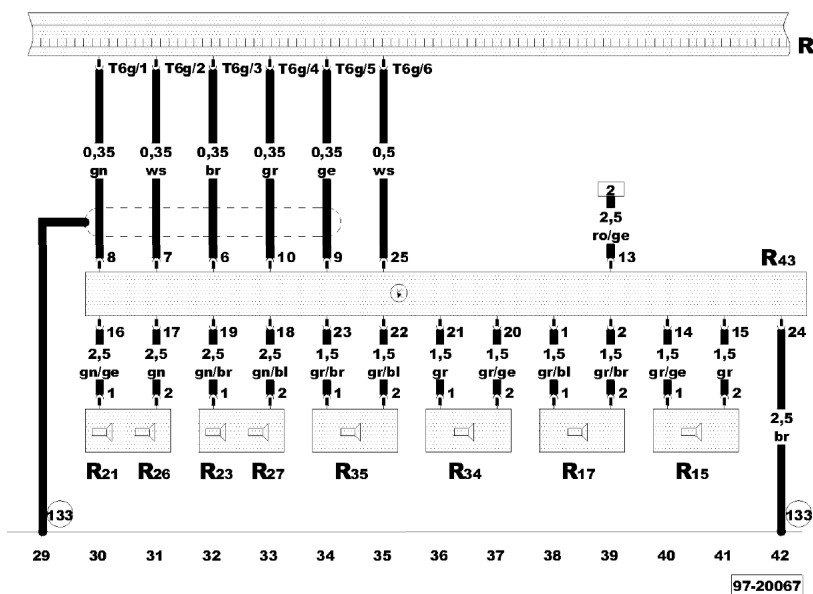


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

97-20067

Audi A8


Current Flow Diagram

No. 52 / 5

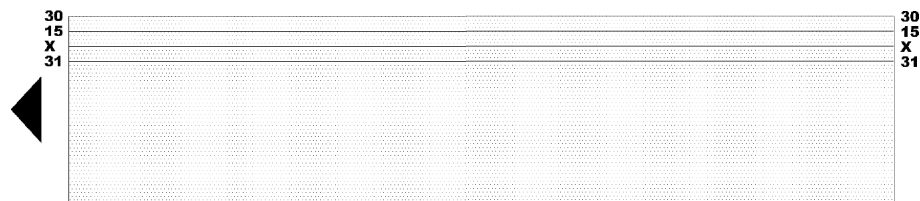

Radio Bose system Concert with and without CD changer

- R - Radio
 - R1 - Aerial connection
 - R36 - Telephone transmitter and receiver unit
 - R46 - Frequency divider for radio receiver and radio system
 - R51 - Antenna per radio/telephone
 - T1o - Single connector, on aerial motor
 - T2bo - 2-pin connector, on aerial motor
 - T8 - 8-pin connector, black, radio connector III
 - V21 - Aerial motor
 - 133 - Earth connection, in loudspeaker wiring harness
- * - Models with aerial motor
 ** - Models with telephone

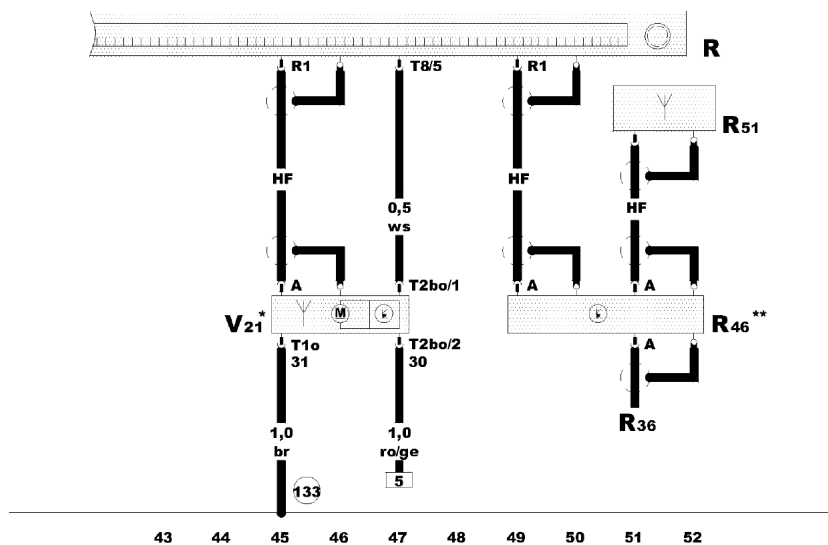

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink